

Application Instructions




Paper pre-mask or clear premask, Thermal Die Cut vinyl, and "waxed" paper backing.

- 1 Line up the decal to the substrate use a ruler to measure, then tape across the top to keep in place.


2. Fold decal over so paper backing is facing upward.

3. Slowly remove backing paper from the premask at a 180° angle. On larger signage use a squirt or two of dishwashing liquid to about a cup water, in a spray bottle. After removing the paper (do not allow the vinyl to touch the surface) lightly spray the liquid onto the surface and go to step 4.

- 4 Fold back down and apply using left to right motions with squeegee Diagonal to image moving from top to bottom on premask image. Wipe away any liquid from step #3.

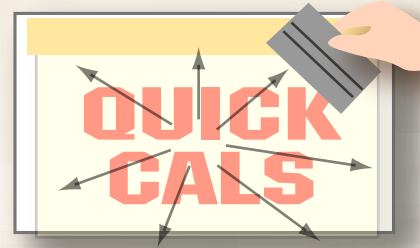


- 5 Using your squeegee make another pass in each direction on the premask pressing firmly, concentrating on the vinyl areas. Working from the center outward.

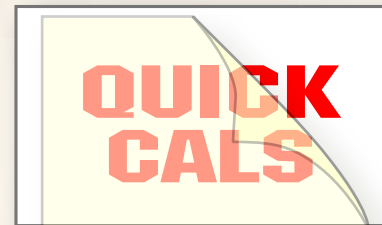

- 6 Carefully remove the premask at a 180° angle making sure the vinyl adheres to the surface. If you used soapy water-let it dry for 15 min before removing pre-mask.

- 7 Re-squeegee only problem areas as needed.

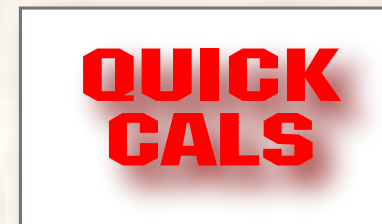

- 8 Remove tiny air bubbles by puncturing them with a sharp needle then lightly pressing the area to remove trapped air. Most will disappear after a few minutes in the sun.

IMPORTANT: Apply decals to surfaces with a temperature above 50° Fahrenheit, and below 100° Fahrenheit and not in direct sunlight.

Store premasked decals at room temperature away from any heat source.